


# How to Troubleshoot the Group Study Room Devices

## Commonly Used Inputs:

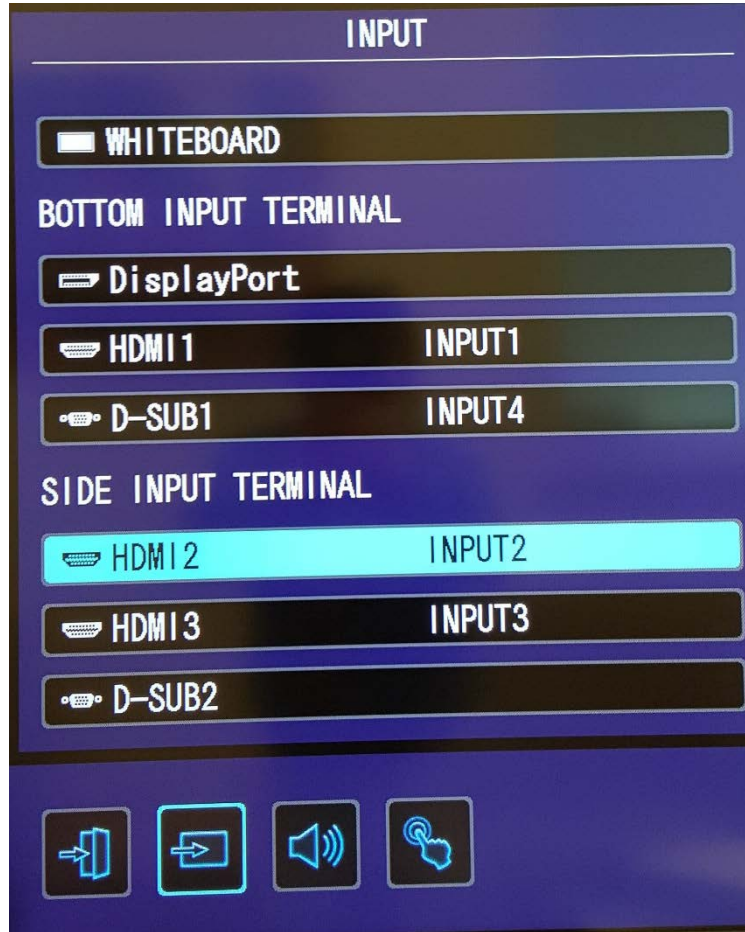

Input Label	Function
Whiteboard	Digital Whiteboard
HDMI 1	Guest Mobile Device (Wireless Access)
HDMI 2	PC
HDMI 3	Guest Laptop
D-SUB1 (VGA / Aux)	Guest Laptop

If the TV Power Button is Red.



Press the Power button & wait for the TV to turn on:



Press the Power Button to turn the TV on.

If the PC is "stuck".




Then the PC needs to be reset so Press the Power button on the PC.  
(PC is located below the TV.)

Need to switch Inputs or input is stuck on Whiteboard?



Press the Touch Menu button

Then touch the input you want.

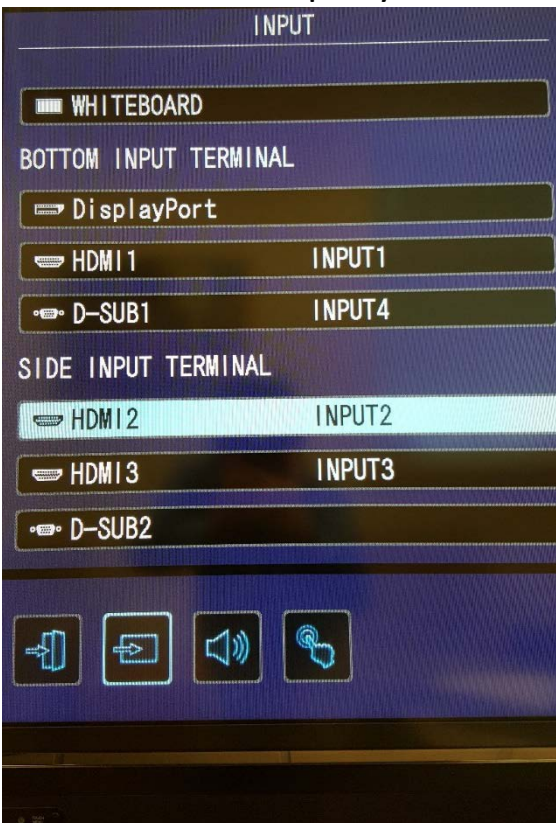

Input Label	Function
Whiteboard	Digital Whiteboard
HDMI 1	Guest Mobile Device (Wireless Access)
HDMI 2	PC
HDMI 3	Guest Laptop
D-SUB1 (VGA / Aux)	Guest Laptop